

Terminal Model

The Ingenico iWL250 Wireless Payment Terminal is a compact and ergonomically designed terminal capable of processing card transactions.

The iWL250 model comes in three variants:

- Bluetooth terminal with PSTN and IP communications
- Mobile terminal with GSM/GPRS communications
- Wi-Fi terminal with Wi-Fi communications

This User Guide addendum covers the Wi-Fi variant and is designed to be used in conjunction with the iWL250 User Guide.

Wi-Fi Setup



PCI DSS (version 2) specifies that WEP must not be used for securing Wi-Fi networks used by payment terminals. PCI DSS compliance requires the use of robust encryption and authentication as provided by the IEEE 802.11i standard (ie. WPA or WPA2).

Wi-Fi terminals **must** only be connected to a Wi-Fi network operating with either WPA or WPA2 Wi-Fi security standards; you should contact your IT provider if you wish to check or amend your Wi-Fi network’s configuration.

To enter the Wi-Fi configuration tool, press the menu key **twice**, then choose SUPERVISOR by pressing the F3 key. You will be asked to type your current supervisor password, and confirm this by pressing the enter key. Press the menu key, choose SHORT CUT by pressing the F1 key, press the menu key **once more** and choose WIFI SETUP by pressing the F1 key.

❖ **MENU, MENU, F3, [password], ENTER, MENU, F1, MENU, F1**

You can use the up, down and enter keys to select the desired option:

NEW PROFILE	Create a new saved Wi-Fi connection profile.
ACTIVE PROFILE	Selects an existing saved Wi-Fi connection profile.
MODIFY PROFILE	Edit an existing saved Wi-Fi connection profile.
REMOVE PROFILE	Remove an existing saved Wi-Fi connection profile.

Multiple Wi-Fi connection profiles (for different Wi-Fi networks) may be saved in your terminal, allowing the most appropriate Wi-Fi network to be used, at any given time, based on availability and the priority weighting associated to each Wi-Fi connection profile.

Create a Wi-Fi Connection Profile

To create a new saved Wi-Fi connection profile select `NEW PROFILE`.

```
Connection Method:
1-Automatic Scan
2-Manual Connection
```

To scan for available Wi-Fi networks use the up and down keys to select `Automatic Scan` and press the enter key to begin.

```
Select Network:

Scanning...
```

Your terminal will scan for all available Wi-Fi networks that are in range.

```
Select Network:
Network_1
Network_2
...
```

All available Wi-Fi networks that are in range will be displayed. Use the up and down keys to select the required Wi-Fi network name and press the enter key.

```
Security Type:
1-Home Security
2-Enterprise Security
```

The security type associated with the chosen Wi-Fi network will be automatically selected; press the enter key to confirm this selection.

```
Cypher:
1-None
2-WEP64
3-WEP128
4-WPA/WPA2
```

The cypher associated with the chosen Wi-Fi network will be automatically selected; press the enter key to confirm this selection.

```
Wi-Fi Password:

_
```

Enter the password associated with the selected Wi-Fi network and press the enter key to confirm.

```
Priority:
[low=0/high=20]

1_
```

If accepted, enter the priority weighting you wish to associate to this Wi-Fi connection profile and press the enter key.

You will receive a confirmation that the Wi-Fi connection profile has been saved.



If you wish to create a Wi-Fi connection profile manually you should choose `Manual Connection`; for this you will need to enter the Wi-Fi network name (ESSID), security type and cypher manually.

Selecting a Wi-Fi Connection Profile

If you have multiple saved Wi-Fi connection profiles you can manually select which Wi-Fi connection profile to use by selecting `ACTIVE PROFILE`.

```
Active Profile:
```

```
[Automatic]
```

```
Network_1
```

```
Network_2
```

Use the up and down keys to select the Wi-Fi connection profile that you wish to use and press the enter key.

You will receive a confirmation that the Wi-Fi connection profile has been selected.

Selecting `[Automatic]` will allow the most appropriate Wi-Fi network to be used based on availability and the priority weighting associated to each Wi-Fi connection profile.

Editing a Wi-Fi Connection Profile

If you need to change the security type, cypher, password or priority associated to a saved Wi-Fi connection profile you should select `MODIFY PROFILE`.

```
Modify Profile:
```

```
Network_1
```

```
Network_2
```

Use the up and down keys to select the Wi-Fi connection profile that you wish to edit and press the enter key.


Follow the on-screen prompts, changing whichever attribute that you wish to edit. You will receive a confirmation that the Wi-Fi connection profile has been saved.



If you edit a saved Wi-Fi connection profile you will always be asked to re-enter the password associated with the Wi-Fi network.

Removing a Wi-Fi Connection Profile

If you need to delete a saved Wi-Fi connection profile you should select REMOVE PROFILE.

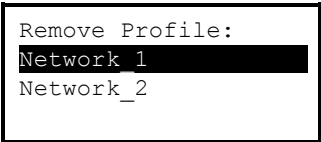

Use the up and down keys to select the Wi-Fi connection profile that you wish to delete and press the enter key.

You will receive a confirmation that the Wi-Fi connection profile has been deleted.

Terminal Display

The terminal display is laid out as below:



Copyright © 2014 Ingenico (UK) Ltd.

This User Guide (v4.1043) relates to terminal software APACS40 97.11.01

Whilst every effort has been made to ensure that the content of this document is accurate, Ingenico will not accept responsibility for any loss, damage or injury that may be incurred as a result of any such errors or inaccuracies. The product is varied to suit acquirer's requirements and as such some features may vary or be disabled, this document should be accepted as a guide only to the use of the product.

In an effort for continued improvements in design and quality; products, features and information regarding the setting up, installation and use of all Ingenico products is subject to change without prior notice.